



Deck Mounted Privacy Panel Instructions

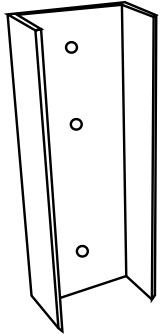

**Top
Mount**

- Step #1** - Install and prepare all mounting surfaces and post to which your privacy panel will be installed.
- Step #2** - Install bottom rail mounts at desired height, centered on post using 3/4 inch screws provided.
- Step #3** - Cut bottom rail to length, fitting inside rail mounts and install
- Step #4** - Screw U-channel trim to post directly on top and centered of bottom rail using three 3/4 inch screw each side.
- Step #5** - Install top rail mounts, centered and resting on top of trim, using 3/4 inch screws provided.
- Step #6** - Place privacy pickets in bottom rail starting with grove side towards post, in most cases last picket will need to be ripped down to fit panel size.
- Step #7** - Cut top rail to fit between rail mounts and install.
- Step #8** - Secure top rail using 3/4 inch screws with hinge cap on deck side of panel, one per side of top rail.
- Step #9** - Cut tops of post to desired height and place caps on if using.

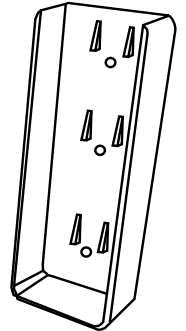

**Bottom
Mount**

